


## 10-160 m TRANSMATCH

use between solid state driver & LINEAR  
OK to COAX FED ANTENNA.

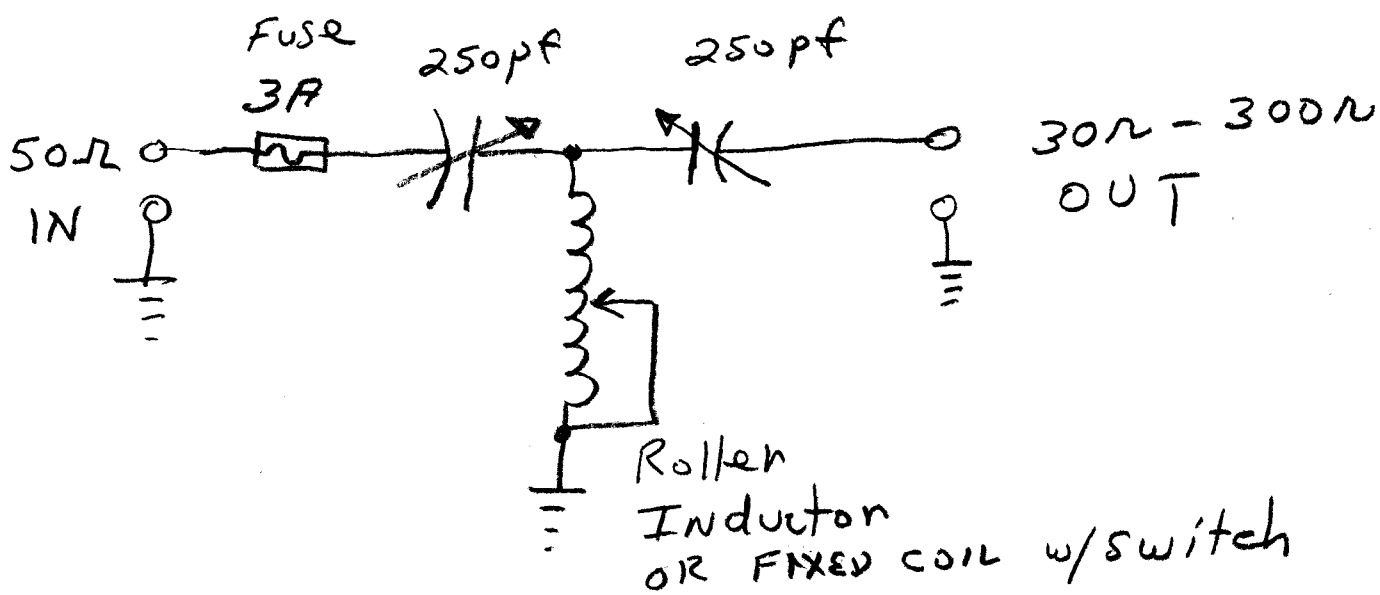

COAXIAL TRANSMATCH - COAX to COAX -

\* CONNECT Rotors to COIL FOR MINIMUM HAND STRAY CAPACITANCE.

\* 3A fuse is for safety from LINEAR flashback

K1JJ  
01-22-09