


1. Remove set from case and remove screws securing T-101 and the Voltage Selector Panel.
2. Disconnect yellow and white lead from backside of terminal #1 and solder this lead to terminal #8.
3. Wire terminal #1 to terminal #5.
4. Use 260-475 and 12 volt positions.
5. Remove R-115 and replace with jumper, #18 wire or larger.

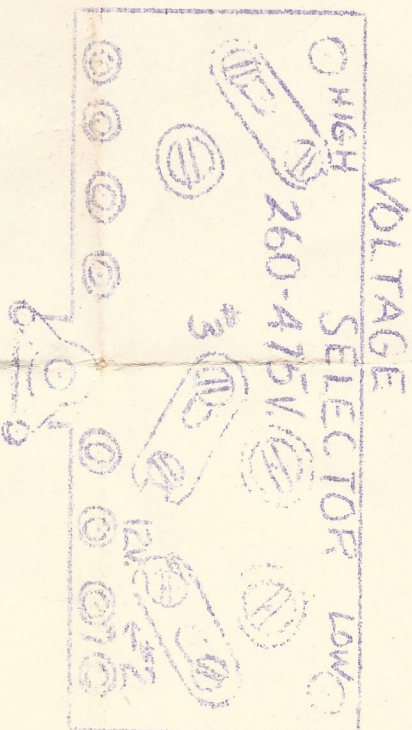

Instructions for converting LM Freq.  
meter to 6 V. AC-DC Operation.

RADIO SPECIALTIES COMPANY

SHORT - R 113